LTpowerCADTM II

Introduction & Quick Start Guide

Rev. 2.0 07/2013



Design Tool Development Team

Power Products, Linear Technology Corp.

LTpowerCAD@Linear.com



A Complete, Step-by-Step Power Supply Design Tool:



Step-by-Step Power Supply Design:



LTpowerCAD



How is LTpowerCAD Different from LTspice:

LTspice: A powerful circuit simulation tool with integrated models of most Linear Technology products.

LTpowerCAD Design Tool:

- A power supply design tool instead of simulation tool.
- Searches for a solution / LTC part for given power supply spec.
- Guides users to select power stage components.
- Provides detailed power efficiency / loss analysis.
- Provide quick loop bode plot stability and load transient analysis.
- Only supports selected power products (mostly buck & modules).
- Design file can be exported into LTspice simulation circuit.




How to get your free LTpowerCAD II

- Go to http://www.linear.com/LTpowerCAD
- Download & install LTpowerCAD II on your Windows PC.
- See later pages for installation instruction.



LTpowerCAD II 2.0 Supported Parts


Buck Converters:

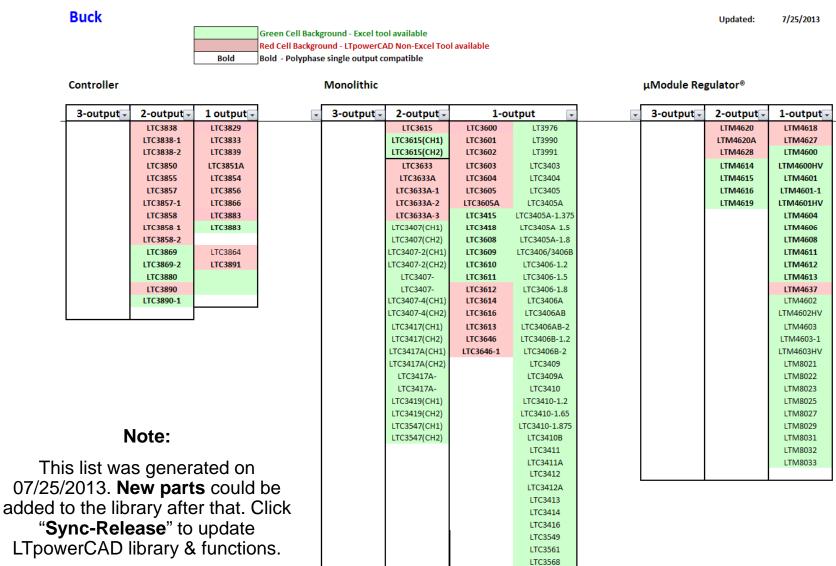



LTpowerCAD II 2.0 Supported Parts

Boost Converters:

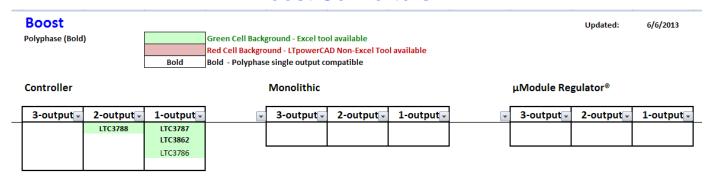

Buck-Boost Converters:

Buck-Boost Polyphase (Bold)		Updated: 6/6/2013								
Controller		Monolithic			μModule Regulator®					
3-output 2-output	1-output	3-output	2-output	1-output	•	3-output	2-output	1-output		
								LTM4605 LTM4607		
								LTM4609		

Note:

This list was generated on 06/06/2013. **New parts** could be added to the library after that. Click "**Sync-Release**" to update LTpowerCAD library & functions.



LTpowerCAD II

Software Installation



Minimum Requirements

The following system and software is required for LTpowerCAD II v2.0 ™

- ✓ PC with Microsoft Windows XP SP2 or later OS
- ✓ **Microsoft Office Excel** 2000, 2003, 2007, 2010 or 2013
- Microsoft .NET Framework 3.5 SP1, 4.0 or Higher

http://www.microsoft.com/net/download

Microsoft SQL Server Compact 3.5 Service Pack 2

http://www.microsoft.com/en-us/download/details.aspx?id=5783

* Note: The LTpowerCAD installer is made to **automatically download and install these the Microsoft .NET and SQL Server** to your system if your system does not already have these installed. However, if for some reason they are not installed automatically, you need to install them manually from Microsoft download sites.


**Note:

- •Windows Vista or Windows 7, Windows 8 based PC has .NET Framework integrated.
- •Some Windows XP based PC may need additional installation of the .NET Framework, which can be freely downloaded at www.microsoft.com.
- •Many new computers may already have SQL Server Compact 3.5SP2 installed (check to make sure)



Minimum Requirements (cont'd)

Optional: check if .NET and SQL Server are installed:

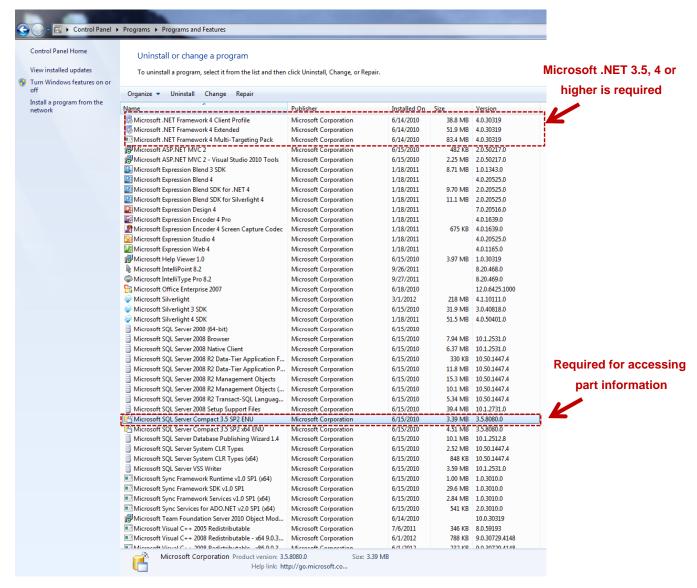




Installing LTpowerCAD II v2.0TM

1. Double Click "Setup.exe" to Start LTpowerCAD II v2.0TM Design Tool Setup Wizard

Note: Do not install by double clicking the "MS.msi" file as this will prevent the installer from checking to install and installing any missing Microsoft requirements.

- 2. Click "Next"
- 3. Select Installation Folder and Click "Next"
- 4. Click "Next" to Confirm Installation and then "Close" to complete the Installation

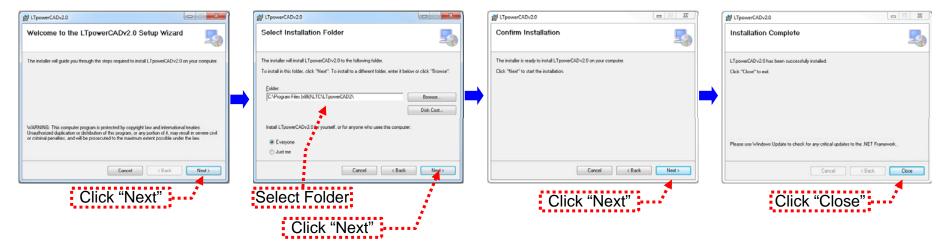

5. Check the contents of the installation folder (see next slide)


Note: The installation will place shortcuts to the LTpowerCAD II v2.0





Getting Start with LTpowerCAD II



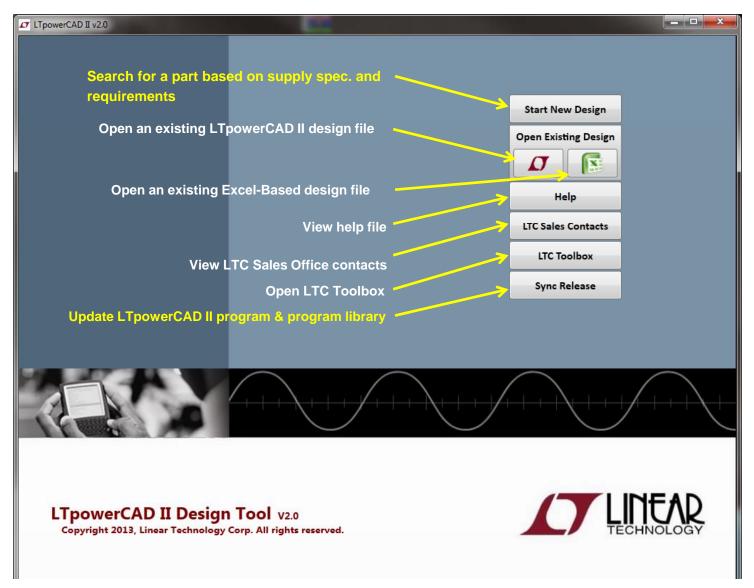



Search Page

Step 1. Enter power supply spec. and required functions.


If you know the LT part# to use, you can enter the 4-digit part# and click "go" instead of search.

Step 3. Select a Part from Search Results Table:

Click LTC icon for LTpowerCAD II tool

Click Excel icon for Excel-Based tool

Note: if the icon is in grey color, it means the design tool is not available.

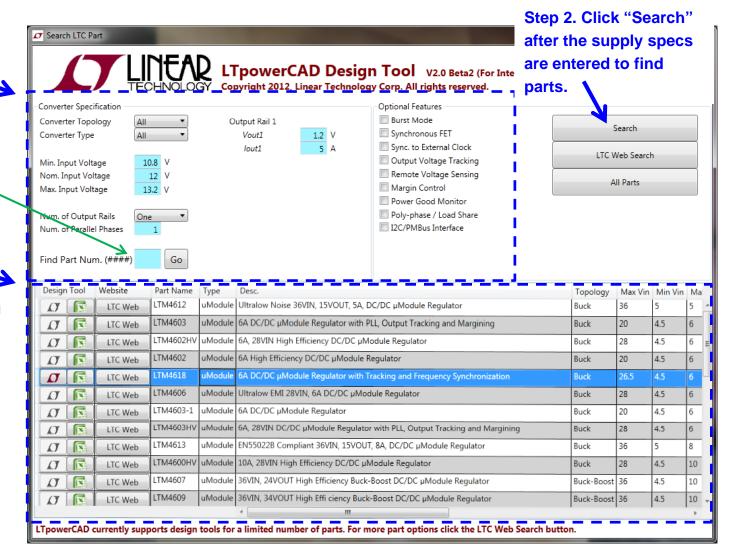



Available Design Tool Formats

Two possible design tool formats:


1. Non-Excel LTpowerCAD Design Tool:

If available, an active LTC button is shown:

2. Excel-Based Design Tool:


If available, an active Excel button is shown:

Note: if the icon is in grey color, it means the design tool is not available yet.

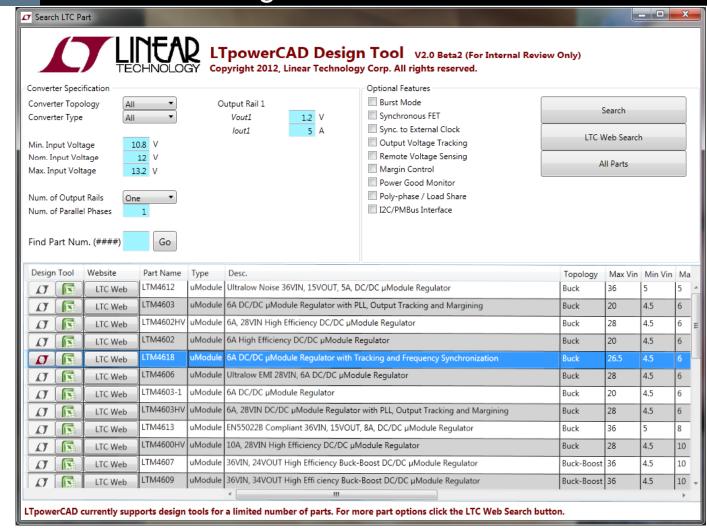



using the LTpowerCADTM Design Tool

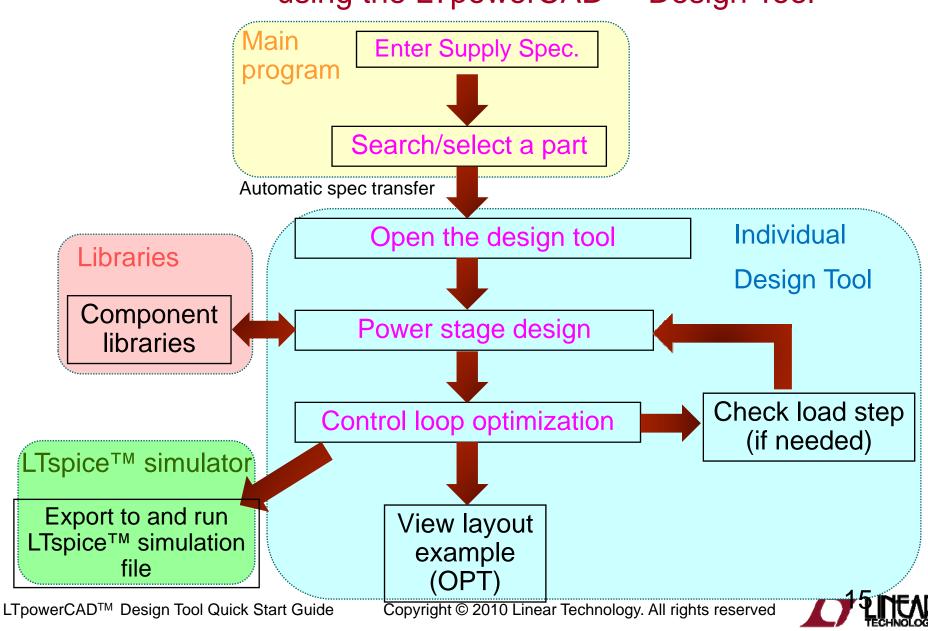

Example of a non-Excel LTpowerCAD design Tool




Design Step 1 – Power Stage Design

Yellow Cells = Suggested values or calculated parameters Blue Cells = User's chosen values **Design Requirements & Part Limits** Red Cells = Warning - parameter outside of recommended range. ☐ LTpowerCAD II v2.0 Power Stage Design timate & Break Down 🔯 Loop Comp. & Load Transient Min Vin: 4.5 V Max Vout: 5.5 V LTC3838 - Dual, Fast, Accurate Step-Down DC/DC Controller with Differential Output Sensing Project Name: Sugg. Max Iout : 30 A Date: Min Sw. Freq. : 200 kHz Max Sw. Freq.: 2000 kHz Cin Input Cap Current Limit Current Limit Target Iout1 Limit Margin 150 % Desired iL Ripple 40 % Target Iout2 Limit Margin 150 9 # Cap Vin max Target Iout1 Limit Sug. L1 Sug. L2 1.25 µH Target Iout2 Limit Cin IRMS 3.26 A 10 V iL pk@ Target Iout1 Limit 15.95 A 1.5 uH iL pk@ Target Iout2 Limit 13.33 A Vin min: Output Voltage iL vly@ Target Iout1 Limit 14.05 A DCR 10.4 mO Output Voltage iL vly@ Target Iout2 Limit 10.67 A Vout1 Prog. 1.2 V 370 kHz Vout2 Prog. 1.8 V Mtop2 out1 Ripple (pk-pk) Part# Vout2 Ripple (pk-pk) 26.56 mV VRNG L Ripple % Vout1: Actual VRNG iL Peak 10.95 A il. Peak 933 A Actual VRNG VOLITO 10 A Vsense max prog. 30 mV iL Viv 9.05 A iL VIv 6.67 A Vsense max prog. Output Rail 2 Mbot1 Mbot2 L1 L2 BG Vout2: Rs1 MFR. MFR. Part# Part# Part# 10 µF Cc2 c 330 μF ESR Cs1 0.047 ut Cs2 0.047 uF Sug Rs1 Sug Rs2 3.07 kΩ SGND PLoss Rs1 DCR Current Sensing DCR Current Sensing Rp1 Sug. Rp1 1.27 kΩ Sug Rp2 1.94 kΩ Rp2 Act. Io1 Limit 5.64 A Act. Io2 Limit 6.09 A iL1 Pk@ Io1 Limit 6.59 A iL2 Pk@ Io2 Limit Vsnsl Pk@ Iol Max 74.1 mV 'sns2 Pk@ Io2 Max 63.8 m' ns2 Vly@ Io2 Max 42.7 mV Vsns1 Vly@ Io1 Max Vsns1 Rip. (pk-pk) 15.1 mV Vsns2 Rip. (pk-pk) 21.1 mV ENSE1+ SENSE2 Feedback Feedback Rt2 Cff2 Cff1 Rt1 Sug. Rt1 60.4 kΩ Sug. Rt2 60.2 kΩ ENSE1-Rt1 60.4 kΩ Rt2 60.4 kΩ Cff2 pF Sug. Rb2 30.2 kΩ OUTSENSE1 Duty & Ton Compensation Rb2 30.1 kΩ Vout1 Duty 12 % Vout2 Duty 18 % Rb1 60.4 kΩ Rh1 Ton1 @ Vin May 216 ns Cflt2 Toff1 @ Vin Min 2054 ns Cth1 Cth2 Cth1 2200 pF Cth2 2200 pF Cthp1 Cthp2 Rth1 Sw. Freq. Rth2 Desired Fsw 500 kHz Rth1 7.15 kΩ Rth2 7.15 kC RT Sug. RT 80.9 kΩ 110 kΩ Act. Fsw 370 kHz Select different current sensing schemes

- •User can only change blue-cell values and check calculated circuit parameters in yellow and red cells.
- Red cells are for warnings. User needs to decide if following/correcting the warning or not.




Design Step 2- Select L and FET, Optimize Eff % & Power Loss

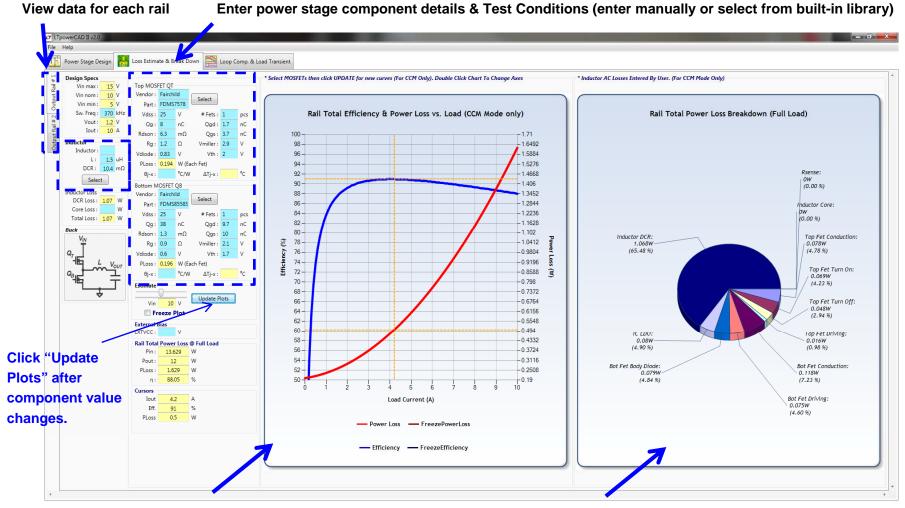

Estimated Efficiency & Power Loss Curves with Data Point Cursors. Double-click to set axes Preferences


Estimated Power Loss Breakdown



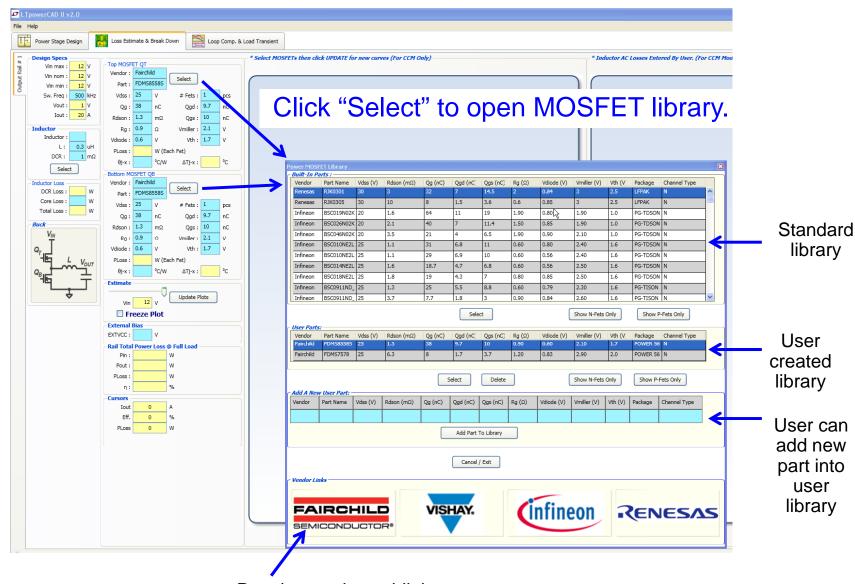

Popular vendor weblinks



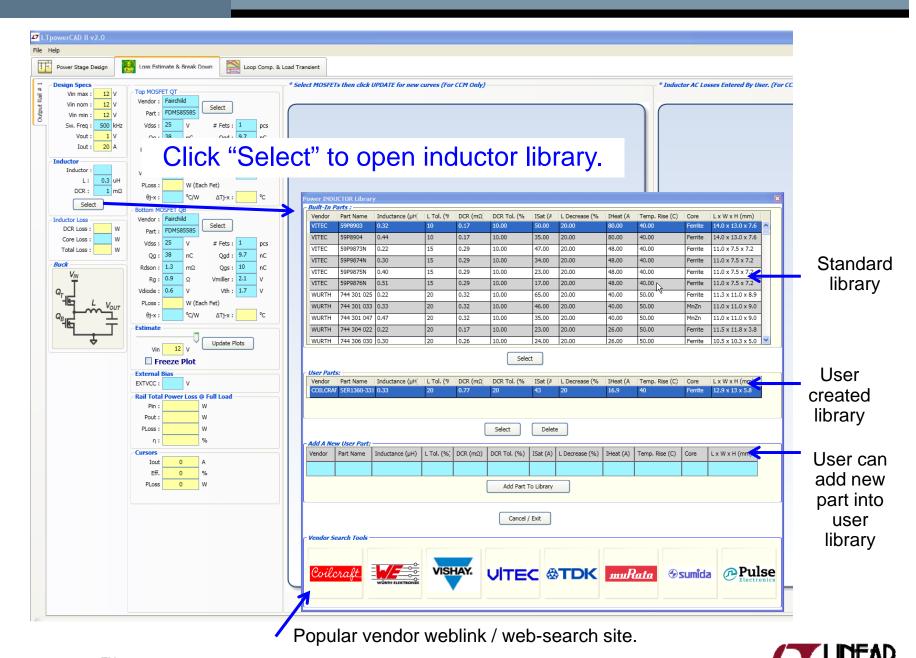


LTpowerCAD II v2.0™ Design Tool Quick Start Guide Co

Copyright © 2013 Linear Technology. All rights reserved.


21

Design Step 3 – Optimize Loop Comp & Load Transient

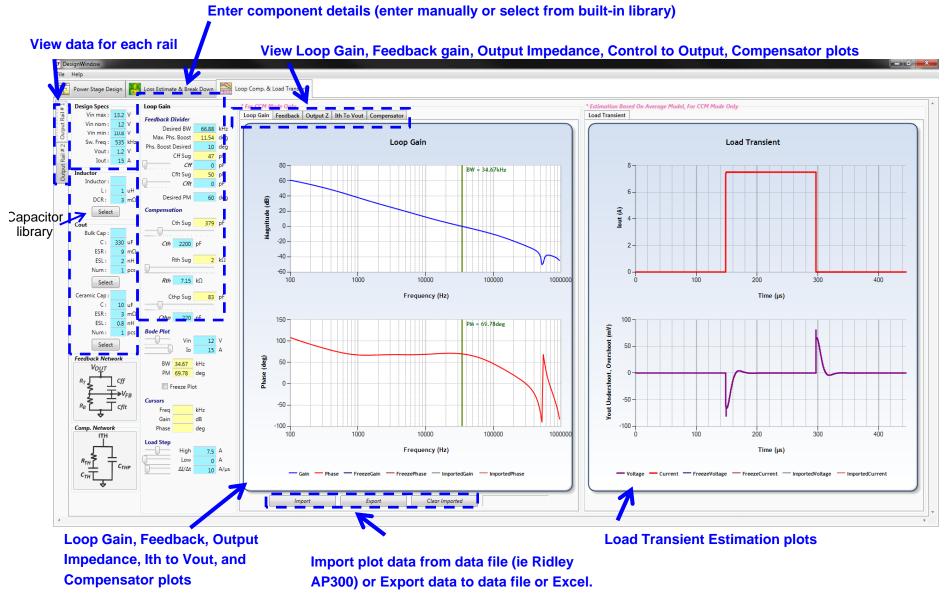




(Optional) Design Step 4 – Export to LTspice for Simulation

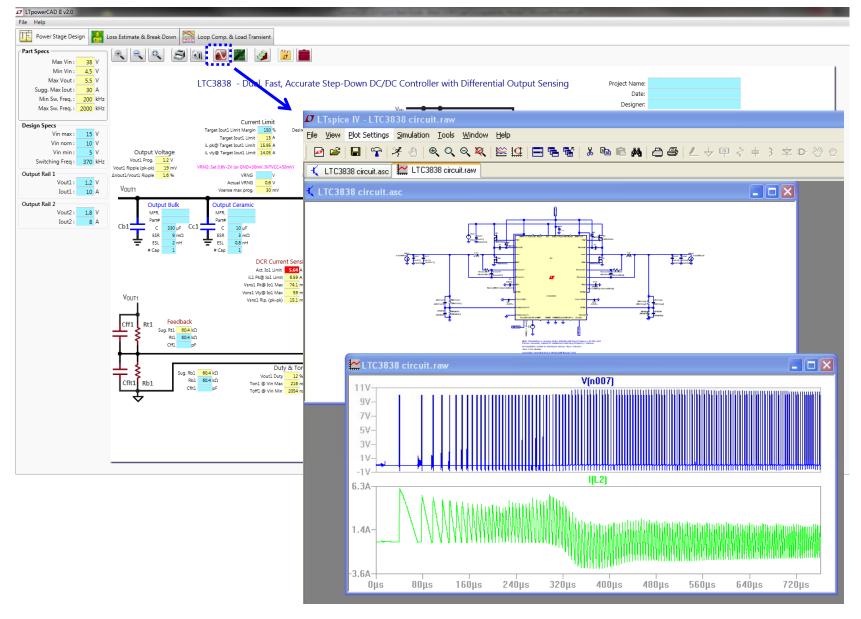



Bench Verified Loop and Load Transient Model

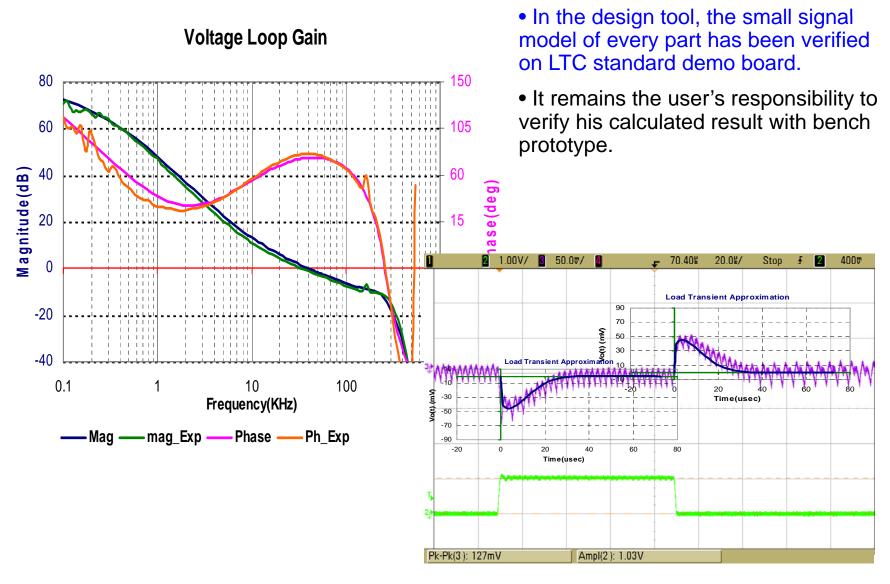




Example of a Excel-Based design Tool



Step 1: Power Components Selection

In the design spreadsheet, power components design is guided with schematic interface:


Values in yellow cells are calculated / recommended by design tool.

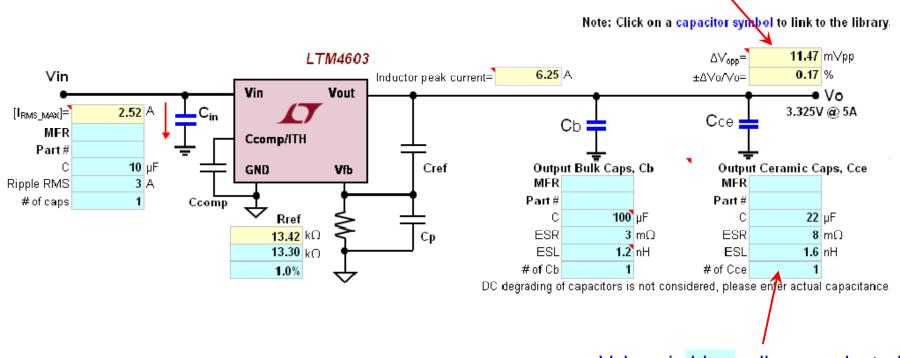

Values in blue cells are selected / entered by user.



Power Stage Performances

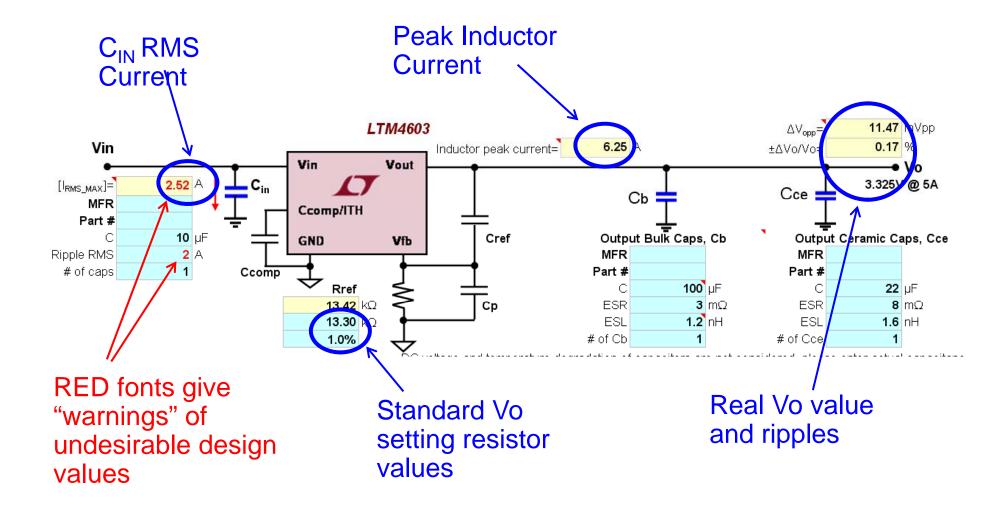




Step 2: Control Loop Optimization

In the design spreadsheet, control loop design can be fine tuned:

Sliding bar for compensation adjustment.

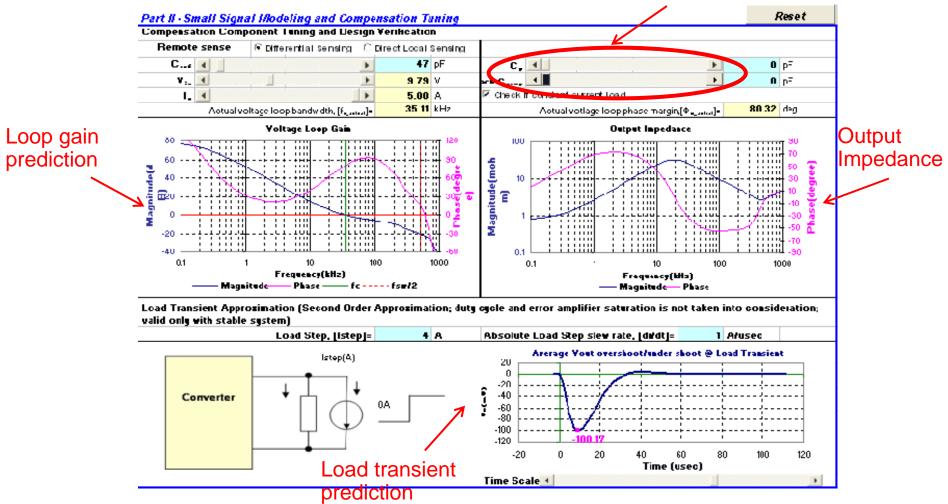




Additional Feature (1):

Export to & Run LTspice™ Simulation

In the design spreadsheet, click the "Export To LTspice" button:

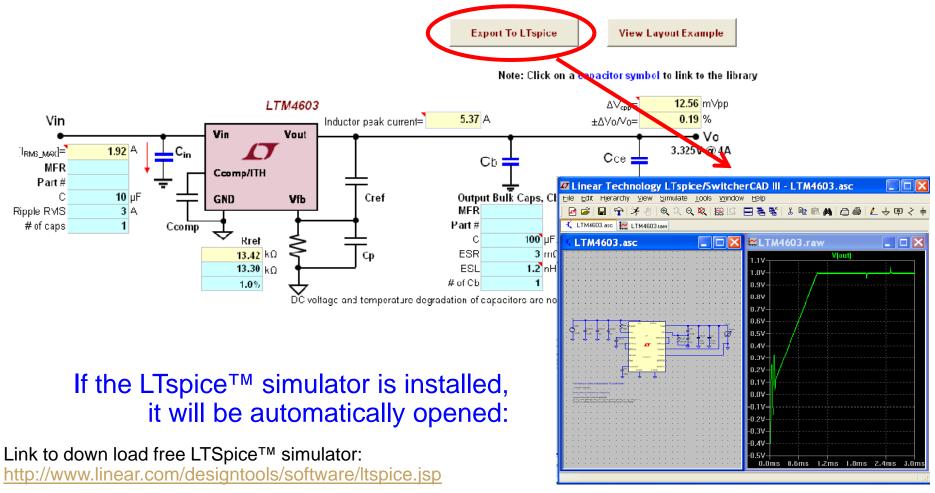



Additional Feature (2):

Summary of design: BOM, size, cost and stress

In the design spreadsheet, click the "Summary" sheet:

			Uni	i 🕟 i	inch	\bigcirc mm					
Componnent	Part #	#ofpants	Value		Package	L	W	Н	Unit Price	Total Price	
Cin (bulk)	0	1	100 μF	1210		0.098	0.126	N/A		\$0.00	
Cin (ceramic)			uF	1206		0.063	0.126	N/A		\$0.00	
Cout (bulk)	2R5TPE220MC	0	220 µF	0805		0.049	0.079	N/A		\$0.00	Danna
Cout (ceramic)	0.00	1	72 µF	1210		0.098	0.126	N/A		\$0.00	Power
MicroModule	LTM4603	1		LGA (15 X 15 X2.8)	0.591	0.591	0.110		\$0.00	
											componen
Power Compon	ent Summary:				Foot print	clearance	factor=	1.5			cummon/
			V/O out	put Bulk Capacitors		0.560	inch^2			summary	
					Total footprint		0.560	inch^2			
Total BOM cost W/O input and out				put Bulk Capacitors		\$0.00					
					Total BOM cost		\$0.00				
Design Analysis	3										
Parameters	Condition	Mir	Minimum		Typical	Maximum		m Units		its	
Input Votlage		7	7.000		12.000	14.000			V		
Output Votlage		0	0.984		0.999	1.014			V		
Inductor peak-to-											Stress analyses
peak Ripple					0.909		0.921		A	4	Otross arranyse.
Frequency					1004.016				Kŀ	Ηz	
Crossover freq.	Vin=8.09∨				119.891				kH	łz	
Phase Margin	Vin=8.09∨				39.159				De	g.	



Any feedback comments on the program or issues encountered are welcome!

Please forward your comments to the addresses below.

LTpowerCAD@Linear.com

LTpowerCAD II v2.0TM

Installation


Troubleshooting



I. Microsoft SQL Server Compact 3.5 SP2 ENU requirement :

1) Possible issue: Microsoft SQL Server Compact 3.5 SP2 is requirement missing

LTpowerCAD II v2.0 requires Microsoft SQL Server Compact 3.5 SP2 to access the internal parts database. If this is not installed, the program may have issues accessing information for parts included in the program. An example screenshot is shown below where this type of error has occurred. If this is confirmed to be installed on your system, make sure it was installed correctly which may require a repair of the installation or new installation of this requirement.

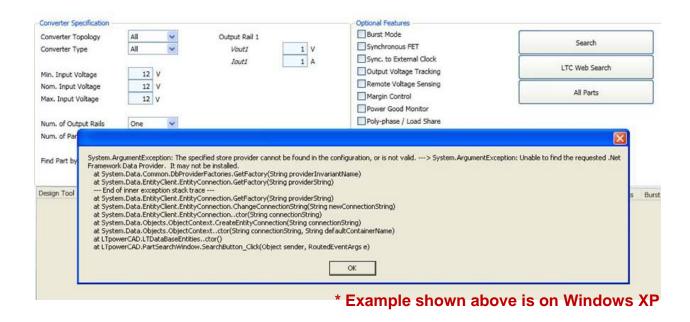





Possible issue solution:

Check the programs you have currently installed on your system to see if Microsoft SQL Server Compact 3.5 SP2 requirement is missing or not. The LTpowerCAD II v2.0 installer automatically checks if you have this requirement, if not it will download and install it automatically. This can also be freely downloaded at Microsoft at https://www.microsoft.com/en-us/download/details.aspx?id=5783 If this is confirmed to be installed on your system, make sure it was installed correctly which may require a repair of the installation or new installation of this requirement.

Step 1) Check the list of programs you have currently installed on your system by going to Start Menu → Control Panel → Uninstall a program

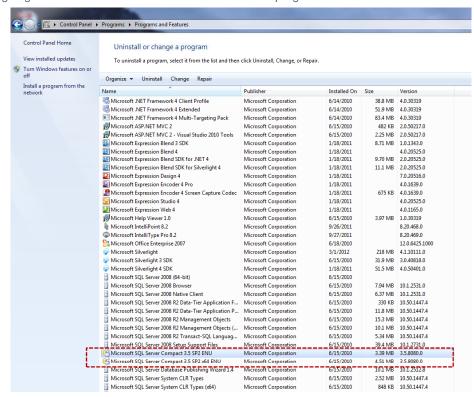

Step 2) If this is not installed, this can be downloaded from http://www.microsoft.com/en-us/download/details.aspx?id=5783 . Please download and install this package, then try to un-install / re-install LTpowerCAD II v2.0.

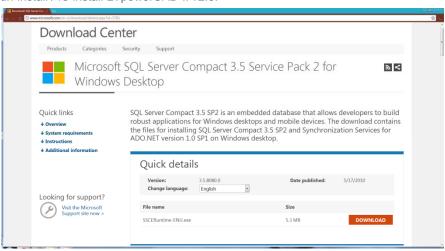


** Note: The installer is made to automatically download and install these software requirements to your system if your system does not already have these installed.



II. Microsoft Security Settings:

2) Possible issue: Microsoft Security Settings

Security default settings may prevent access of LTpowerCAD II v2.0 from its database causing an error message to pop up when searching for a part (see below).

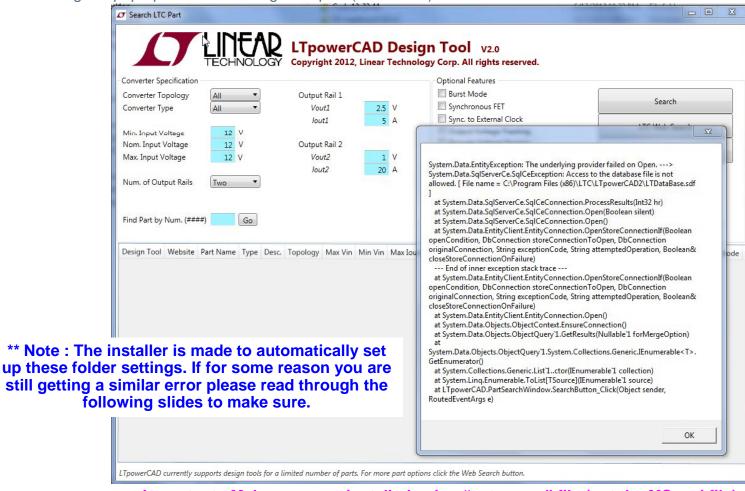




Possible issue solution:


Run the program with an Administrator account, or try to modify your system's Users account security settings for now (see below).

Step 1) Go to the LTC folder location: (ie C:\Program Files (x86)\LTC)

Step 2) Right click on the LTpowerCAD 2 program folder → *Properties*

Step 3) Click on the **Security** tab. Click on your **Administrators** account and see that the permissions should show Allow for all options (except for Special permissions). The **SYSTEM** account should also have the same settings.

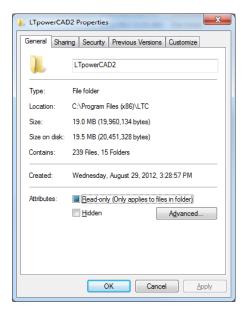


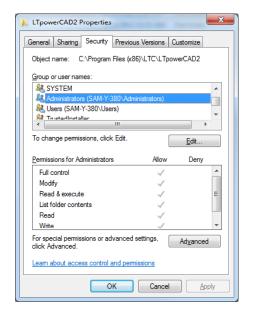



Possible issue solution (cont'd):

Step 4) Click on your **Users** account to see the user settings. Your user account may not have the permissions set (like shown below) that are needed. You can change these in the next step.

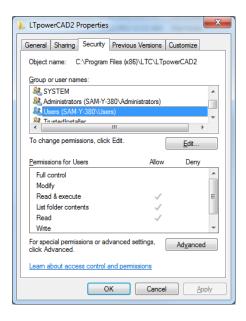

Step5) Click on the **Edit** button and click on your **Users** account again and click the check boxes on the **Allow** column for *Full control, Modify, Write.* Click **OK**. The settings should now be the same as you saw for the **Administrators** account.

