Contact displacement sensor

D5SN

Compact, light, and high performance

- Ultra-small sensor only 6-mm dia. in diameter
- 0.1-μm high resolution (D5SN-S01)
- IP67 protective structure (D5SN-S01/S04).
- Insulated sensor
- Voltage/current output



Ordering Informotions

Item	Model			
Sensor	D5SN-S01			
	D5SN-S04			
	D5SN-S04-L			
Amplifier	D5SN-A01			
Note: The amplifier is the same for all sensors.				

• Select from three sensors according to the measurement environment

Specifications

Sensor

Item Model	D5SN-S01	D5SN-S04	D5SN-S04-L	
Measurement range	1 mm 4 mm			
Operating range	Approx. 1.5 mm Approx. 5 mm			
Resolution	0.1 μm *1 0.4 μm *1			
Linearity	0.3% F.S. max. 0.5% F.S. max *2			
Measuring power	Approximately 0.7 N *3		Approximately 0.25 N *3	
Protective structure (excluding the connector)	IP67	IP54		
Mechanical life	50 million times or more			
Insulated/ non-insulated	Insulated type			
Ambient temperature	-10°C to 60°C (with no icing or condensation)			
Ambient operating humidity	25% to 95%RH (with no condensation)			
Temperature drift	0.03%F.S./°C *4			
Weight	Approximately 70 g (including cable and connector)			
Cable length	3-wire shielded cable, 2m			

Item Model		D5SN-A01		
Power supply voltage (permissible range)		12 to 24 VDC (10.8 to 26.4 VDC)		
Current consumption		80 mA max.		
Analog output	Voltage	From -5 to +5 V (load impedance of 10 k Ω or higher) * 5		
	Current	4 to 20 mA (load impedance of 300 Ω or less) * 5		
Enable output	Output form	NPN open collector		
	Open/close output current	100 mA max.		
	Residual voltage of output when ON	1.5 V max.		
	Collector withstand voltage when OFF	26.4 VDC		
	Current leakage when OFF	0.1 mA max.		
Protective structure		IP30		
Ambient temperature		-10°C to 55°C (with no icing or condensation)		
Ambient operating humidity		25% to 85%RH (with no condensation)		
Temperature drift		0.010%F.S./°C *4		
Weight		Approximately 200 g (including cable)		
Cable length		5-wire shielded cable, 2 m		

*1. Minimum possible scanning value when using our K3NX Series of Digital Panel Meters

*2. F.S. indicates the measurement range (1 mm or 4 mm) *3. Typical value at the central measurement position whe

2. Two indicates the measurement range (1 mm or 4 mm)
*3. Typical value at the central measurement position when the standard measurement head is attached and fixed in the downward orientation. When fixed in the horizontal or upward orientation, the measuring power will decrease. Note that if a measurement head other than the standard head is used, the measuring power will vary depending on the weight of the head.
*4. Typical value at the center of the measurement range.
*5. Even if the object is within the measurement range, the analog output may deviate from the specification range (-5 to +5 V, or 4 to 20 mA) depending on the offset adjustment.

Amplifier

adjustment or the span adjustment.

Nomenclature:







Connector (for sensor)

- Position indicator (green) - Alarm indicator (red), Enable indicator (green)

Output Characteristics

Voltage/current output

D5SN-S01



D5SN-S04/S04-L

Amplifier



LED display and ENABLE output

Indentation position		LED display		ENABLE out-	Remarks
		FAR NEAR	ALARM / ENABLE	put	Remarks
Entire area (when problem occurs)				OFF	Indicates problems such as a bad connector connection or a broken wire in the sensor cable.
Outside measurement range	Open side			OFF	
In measurement range	Open side			ON	
	Central vicinity			ON	Indicates the central vicinity of the measurement range.
	Indentation side			ON	
Outside measurement range	Indentation side			OFF	Danger of plunger damage.

Dimensions (Unit: mm)

Sensor



Precautions

Correct Use

- This product is a high-precision instrument. Do not drop or subject to any other kind of shock.
- Do apply a greater force to the plunger of this product than that indicated in the diagram. Excessive force may damage the plunger.



• The sensor will break if the plunger is pressed in too far. Measurement should be performed within the range that the pressure warning indicator does not illuminate.

- Do not remove the dust-protection rubber boot. Foreign matter in the sensor may cause it to fail.
- Observe the location and load requirements when mounting the sensor and amplifier. Mounting with excessive force may damage the devices.

Connection

Input/output circuit schematic



Connection schematic

Example of connection to a digital panel meter (K3NX)



Example of connection to a digital panel meter (K3AS)



Note: Two inputs are possible on the K3AS, however, due to the output circuit of the D5SN, two current inputs are not possible.

Example of connection to a digital panel meter (K3GN)



Note: Power output (24 V DC) is not possible to the K3GN.

- Note: 1 . If you do not intend to use the enable outputs (orange and pink), cover the outputs with insulation tape to ensure that they do not contact any other wires.
 - For the digital panel meter, use a DC voltage input type or a DC current input type.

Options (measurement heads) (Please inquire regarding delivery times and prices)

Select from a wide variety of measurement head options according to the measurement object



BB-85